

RELIANCE EASY/TRAN® TRANSFER SWITCH

MODEL NO:

CSR-202

ELECTRICAL RATING: 20 Amps., 125/250 VAC, 50/60 Hz., 3-wire

5 KA SHORT CIRCUIT WITHSTAND

TYPE 3 ENCLOSURE

SUITABLE FOR USE IN ACCORDANCE WITH ARTICLE 702 OF THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70.

THIS PRODUCT MEETS OR EXCEEDS ALL REQUIREMENTS OF UL1008 STANDARD FOR TRANSFER SWITCHES.



NON AUTOMATIC TRANSFER
SWITCH - 68UN

WIRING

IMPORTANT: DISCONNECT ALL ELECTRICAL SUPPLY SOURCES BEFORE INSTALLATION AND WHEN SERVICING CONNECTED EQUIPMENT OR CIRCUITS.

Remove the wiring compartment cover by loosening the two screws that hold it in place, and lift out.

Six color-coded wire leads are provided. They are to be connected as follows:


RED (2): To incoming utility line, 250 VAC.

WHITE: To neutral.

BLACK (2): To load, 250 VAC

GREEN: To ground bar or terminal.

Replace wiring compartment cover when wiring is completed.

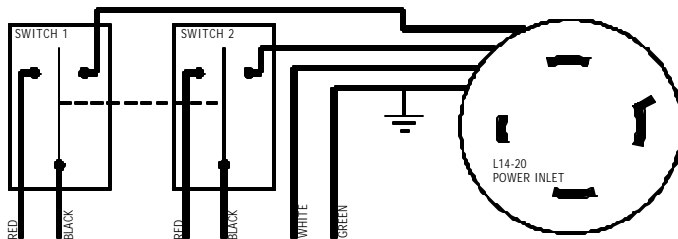

USING THE RELIANCE TRANSFER SWITCH WITH A GENERATOR

THIS RELIANCE TRANSFER SWITCH IS NOT FOR "DO-IT-YOURSELF" INSTALLATION. Installer must be thoroughly familiar with electrical wiring systems. This Reliance Transfer Switch is designed to provide, in the event of a utility power outage, a safe and simple method of powering a single 250 volt circuit, or two 125 volt circuits simultaneously, from a portable generator with a combination 125/250 VAC output. The DPDT selector switch will feed the circuit load(s) from either the utility or the generator, and prevent backfeeding of one source from another.

KEY COMPONENTS OF THE TRANSFER SWITCH

SELECTOR SWITCH. Selects either "LINE" (utility) or "GEN" (generator) as the source feeding the circuit load(s).

POWER INLET. NEMA L14-20 configuration. Inputs power from the portable generator.

TRANSFERRING FROM UTILITY POWER TO GENERATOR POWER

1. Move the selector switch handle to the "OFF" or "LINE" position.
2. Insert the male power cord plug into the appropriate outlet on the generator. If locking receptacle is used, rotate to lock.
3. Insert the female power cord connector into the power inlet located on the lower face of the transfer switch. Rotate to lock.
4. Start the generator, following the procedures described in the generator owner's manual furnished by the generator manufacturer.
5. Move the selector switch knob to the "GEN" position to energize load from generator.

TRANSFERRING FROM GENERATOR POWER BACK TO UTILITY POWER

1. Move the selector switch handle to the "LINE" position to energize load from utility.
2. Follow the procedures in the generator owner's manual to turn off the generator.
3. Disconnect the power cord.



RELIANCE CONTROLS CORPORATION
2001 Young Court Racine, WI 53404

FORM OPCSR302 101502